

LiveNoise LN2-EAR Noise Monitor



Features

- Wall Mounted Noise Display
- Monitors, Analyses and Stores Sound Levels
- Network Connection (WiFi or wired Ethernet)
- Lights up when noise levels are too high
- IEC 61672 Class 2, ANSI S1.4 Type 2
- **No contract or annual fees**

Applications


- Office Noise
- Hospital Noise
- Call Centres
- Libraries

Overview

The noise warning sign and interface module can be mounted on a wall or other suitable surface. An optional adjustable VESA mount can be used for more secure or corner mounting if needed. It measures the sound levels in line with the noise measurement standards, stores the results, and sends them on to our cloud server.

Live Noise and Reporting

You can view the live sound level at each noise monitor or you can view long-term reports over daily, weekly, monthly or custom periods. This is all done from your web browser after logging in to your LiveNoise account.

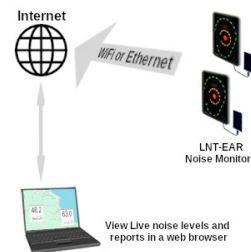

LiveNoise LN2-EAR Noise Monitor

Specifications

Technical Specifications

Acoustic Standards IEC 61672-2:2002 Class 2

Frequency Range ANSI S1.4 Type 2
20 Hz to 20 kHz

Measuring Range 30 to 120 dB

Deviation ± 0.5 dB
Frequency Weighting "A" and "C"

Noise Measurements Leq, Fast and Slow sound
Level

Additional Outputs 0-10 V or 4-20 mA

USB Port For USB memory stick
configuration

Ethernet Port RJ45 socket

Internal Memory 16 GB for up to 3 years
storage

Dimensions
Noise Warning Sign 265 x 205 x 46 mm, 10.4" x
8" x 1.8"

LiveNoise Terminal 70 x 88 x 29 mm, 2.8" x 3.5"
Power x 1.2"
5 VDC, max 12W (power
adapter included)

Dimensions

Head Office

NoiseMeters Ltd
7 Jayes Park
Ockley
Surrey
RH5 5RR

Telephone **+44 130 677 0855**
Fax **+44 845 680 0316**

Email: **info@noisemeters.ie**
Support: **support@noisemeters.ie**

Web Sites

Main site:
<https://www.noisemeters.ie>

Product shortcut:
<https://www.noisemeters.ie/product/livenoise/Int-ear/>

Tech Support:
<https://support.noisemeters.com>