

## LiveNoise LNT-IND with Industrial Noise Sign

### Features


- Wall Mounted Industrial Noise Display
- Monitors Sound Levels
- Network Connection (WiFi or wired Ethernet)
- Lights up when noise levels are too high
- IEC 61672 Class 2, ANSI S1.4 Type 2

### Applications

- Industrial Environments
- Factory Noise
- Hearing Protection

### Overview

The industrial noise warning sign and interface module can be mounted on a wall or other suitable surface. An optional adjustable VESA mount can be used for more secure or corner mounting if needed. It measures the sound levels in line with the noise measurement standards (IEC 61672 Class 2, ANSI S1.4 Type 1), stores the results, and makes them available to the LiveNoise Supervisor and Reporter software over your network, or to our cloud server over the Internet. An HDMI output can be used to display the live sound levels on a computer monitor or HDMI television.

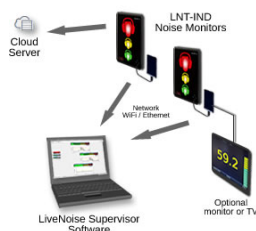

### LiveNoise System - "Internal"

On a purely "internal" system, the noise monitor communicates continuously with the LiveNoise Supervisor software running on a computer on your network to provide real-time noise levels, long-term stored noise measurements and high-noise alarms. Using this setup there is no need for the monitors or software to communicate with the outside world.

The LiveNoise Reporter software can generate reports of the noise and alarms over daily, weekly, monthly or other custom periods.

### LiveNoise System - "Cloud"

With the cloud based reporting system the noise monitor uploads its measurements to our LiveNoise Server for you to view using the Web Reporter. You access this through a web browser.

With this setup there is no software to run locally and you can view the results from anywhere with Internet access.

### Best of Both Worlds

The standard LiveNoise System includes both methods. You can use the Supervisor software on your local network, you can use the cloud based reporting, or you can use both at the same time.

## LiveNoise LNT-IND with Industrial Noise Sign

### Specifications

#### Technical Specifications

Acoustic Standards IEC 61672-2:2002 Class 2

Frequency Range ANSI S1.4 Type 2

Measuring Range 20 Hz to 20 kHz

Range 30 to 120 dB

Deviation  $\pm 0.5$  dB

Frequency Weighting "A"

Noise Measurements Leq, Fast Sound Level

Additional Outputs

0-10 V or 4-20 mA

USB Port For USB memory stick configuration and keyboard

Ethernet Port RJ45 socket

Video Output HDMI

Internal Memory 16 GB for up to 5 years storage

Dimensions

Noise Warning Sign 265 x 205 x 46 mm, 10.4" x 8" x 1.8"

LiveNoise Terminal Power 70 x 88 x 29 mm, 2.8" x 3.5" x 1.2"

Power 5 VDC, max 12W (power adapter included)

#### Dimensions

---

#### Head Office

NoiseMeters Ltd  
7 Jayes Park  
Ockley  
Surrey  
RH5 5RR

Telephone **+44 130 677 0855**  
Fax **+44 845 680 0316**

Email: **info@noisemeters.ie**  
Support: **support@noisemeters.ie**

#### Web Sites

Main site:  
<https://www.noisemeters.ie>

Product shortcut:  
<https://www.noisemeters.ie/product/livenoise/lnt-ind/>

Tech Support:  
<https://support.noisemeters.com>